


Replacing the Series 6600 Switch Power Supply

If the Series 6600 Switch is configured with redundant power supplies, the switch will not suffer any loss of traffic or performance if a power supply fails. Replace the failed component as soon as possible. The PS (Power Supply) LED will blink simultaneously with the switch Fault LED indicating a power supply has failed.

To remove an AC power supply:

1. Ensure the failed power supply is not plugged into an AC power source.
2. Grasping the handle of the failed power supply release the locking mechanism by squeezing the latch handle and remove the failed power supply.

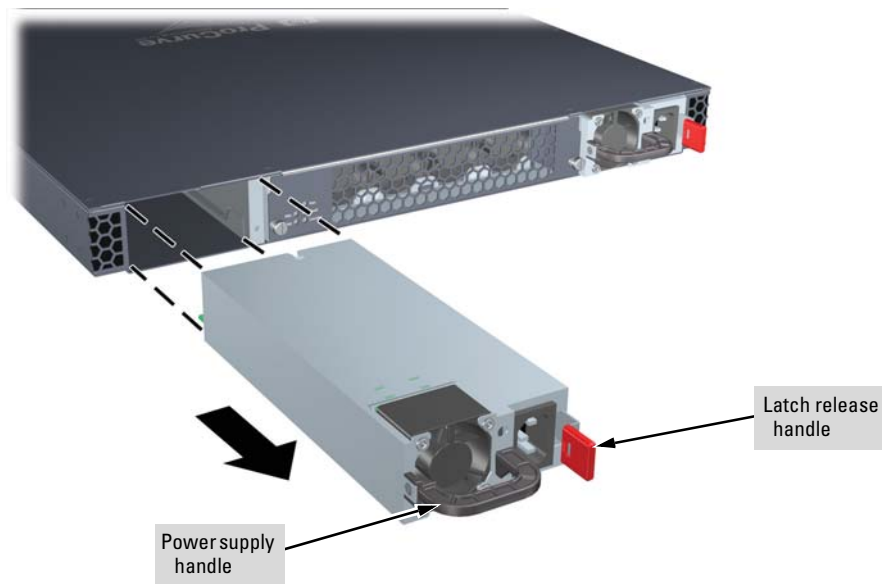

3. Insert the new power supply. Slide it in all the way in until the locking mechanism locks.