

# Read Me First

*for the ProCurve Wireless Access Point 10ag (J9140A and J9141A),  
Software Version WM.01.02 (and later)*

---

## Contents

About Your ProCurve Wireless Access Point 10ag Documentation Set . . . . .	page 1
View or Download the Software Documentation Set . . . . .	page 1
Installation and Setup . . . . .	page 1
Setting the Country/Region Code . . . . .	page 2
Customers in the U.S., Canada and Taiwan: FCC Changes to Dynamic Frequency Selection (DFS) in the 5 GHz Band . . . . .	page 2
Power over Ethernet (PoE) Power Usage . . . . .	page 2
Software Updates Are Free! . . . . .	page 2

## About Your ProCurve Wireless Access Point 10ag Documentation Set

The documentation set includes the following:

Document	Available on the ProCurve Web site	Shipped with the Access Point
<i>Read Me First</i> (this document)	No	Yes
<i>Installation and Configuration Guide</i> <sup>1</sup>	Yes	Yes <sup>2</sup>
Release Notes (for software updates) <sup>1</sup>	Yes	No

<sup>1</sup>The latest version is always available (PDF) and downloadable at [www.procurve.com](http://www.procurve.com).

<sup>2</sup>On the Documentation CD-ROM supplied with the product.

## View or Download the Software Documentation Set

For the most current information about software feature and configuration information, please visit the ProCurve Web site, where you can freely view or download the latest software documentation for your product. To do so:

1. Go to [www.procurve.com](http://www.procurve.com).
2. To display the list of downloadable manuals, click on the following links:

### Technical support

#### Product manuals (all)

#### ProCurve Wireless Access Point 10ag.

(You may want to bookmark this Web page for easy access in the future.)

## Installation and Setup

To install and set up your access point, see the *ProCurve Wireless Access Point 10ag Installation and Configuration Guide* (in Adobe® PDF) on the ProCurve Documentation CD-ROM included with your product.

**Reading Adobe PDF files:** If you do not have the free Adobe Reader installed on your system, download it from Adobe's Web site at:

<http://www.adobe.com/products/acrobat/>

## Setting the Country/Region Code

The correct Country/Region Code must be set for the country or region in which you operate the access point so that it uses the correct authorized radio channels for wireless network devices.

The North America product, J9140A, comes with the Country/Region Code pre-configured; the worldwide product, J9141A, does not. The radio is disabled if the Country/Region Code is not set. Once the Country/Region Code is set, the radio is enabled.

For instructions, see "Installation Procedures" in the ProCurve Wireless Access Point 10ag Installation and Configuration Guide on the CD-ROM.

## Customers in the U.S., Canada and Taiwan: FCC Changes to Dynamic Frequency Selection (DFS) in the 5 GHz Band

Effective July 20, 2007, new FCC regulations on the use of the 5 GHz band, the band used by radios supporting the IEEE 802.11a standard, prohibit the sale of radios not meeting the new specifications. To comply with these new requirements, channels 52, 56, 60 and 64 (5.25-5.35 GHz) are not supported (J9140A, for North America and Taiwan only).

These channels remain available for use in other countries/regions (J9141A, for worldwide use).

## Power over Ethernet (PoE) Power Usage

The ProCurve Access Point 10ag can use Power over Ethernet (PoE) power for operation. Such power is specified by the IEEE 802.3af standard. This power can be supplied from an 802.3af-compliant switch via the Ethernet cabling from the switch to the access point, or from an 802.3af-compliant power injector placed inline in the Ethernet cabling from a switch to the access point.

---

### Caution:

Power over Ethernet for the ProCurve Access Point 10ag must comply with the IEEE 802.3af standard. The use of a non-compliant power source is not supported; such use may cause damage to the access point and may void the warranty.

This product and all interconnected equipment must be installed indoors within the same building, including all associated LAN connections, as described by Environment A of the IEEE 802.3af standard.

---

## Software Updates Are *Free!*

ProCurve Networking provides free software updates on the ProCurve Web site for your Wireless Access Point 10ag. Go to the ProCurve Web site at [www.procurve.com](http://www.procurve.com), then click on **Software updates**. Under **Latest software**, click on **Wireless Access Points**.

© Copyright 2007 Hewlett-Packard Company, L.P.

The information contained herein is subject to change without notice.



Part Number: 5991-8614  
October 2007

