
Read Me First

for ProCurve Manager 2.3, Identity Driven Manager 2.2, Mobility Manager 2.0, Network Immunity Manager 1.0

To install any of the software listed above (PCM/PCM+, IDM, MM, NIM) simply insert the product disc into the CD ROM or DVD drive on the computer you will use as your network management server. The program will auto install. If, for whatever reason, the auto install does not work, run the **install.exe** program from the CD.

PCM is used below to refer to both the ProCurve Manager and ProCurve Manager Plus (PCM+) software.

Before you Install

Please refer to the “ProCurve Manager 2.3 Release Notes” for the latest information. Release Notes and the latest PCM documentation can be accessed from the ProCurve web site at:

www.hp.com/rnd/support/manuals/ProCurve-Manager.htm

Upgrading from PCM 1.6, 2.0, 2.1, or 2.2 to PCM 2.3

You must have version 1.6, 2.0, 2.1, or 2.2 of PCM installed prior to upgrading your installation to PCM 2.3.

- If you are upgrading from PCM 1.6, back up the database file: `\PNM\server\db\solid.db` before beginning the installation.
- If you are upgrading PCM 2.0, 2.1, or 2.2, back up the database file: `\PNM\server\mysql` directory before beginning the installation.

This allows you to restore your data if the existing database is lost or corrupted during database migration.

UPGRADE NOTE:

Once you install PCM Version 2.3, you cannot revert to a previously installed version. If uncertain about upgrading to Version 2.3, install it on a system that does not have any earlier versions of PCM/PCM+ installed.

When installing PCM 2.3, to use MM 2.0 you must select the MM option to install MM 2.0 GUI and database updates. If you are running IDM 2.1 or earlier, select the IDM option to install changes in the IDM database for PCM 2.3. When installing PCM 2.3, to use NIM 1.0 you must select the NIM option to install NIM 1.0.

Supported Software

ProCurve Management software is supported on the following Operating Systems:

- MS Windows 2003 Server
- MS Windows XP Pro (Service Pack 2 or better)

PCM software is not supported on MS Windows Vista. The PCM client is supported on MS Windows XP with 1GB memory recommended.

The IDM Agent is supported on MS Windows 2003, various Linux platforms, and NAC 800.

System Requirements

Network size/ Install type	CPU	RAM	Free Disk Space	NIC
Small-Medium/Min.	2 Ghz Pentium IV*	1 GB	10 GB	1 GB NIC
Small-Medium/Max.	3 Ghz Pentium IV*	2 GB	40 GB	1 GB NIC
Medium-Large/Min.	3 Ghz Pentium IV*	2 GB	40 GB	1 GB NIC
Medium-Large/Max.	Intel Xeon	4 GB	80 GB	1 GB NIC

* Intel Pentium IV or equivalent processor

Small - Medium, Minimum = one 50-device starter license (J9057A), installing only PCM/PCM+ on network with 50-250 managed devices

Small - Medium, Maximum = one 50-device starter license (J9057A) and two 100-device incremental licenses (2 each, J9058A), installing PCM+, IDM, MM, and NIM products.

Medium-Large, Minimum = 50-device starter license (J9057A) and two 100-device incremental licenses (2 each, J9058A), installing only PCM/PCM+

Medium-Large, Maximum = an Unlimited license (J9059A), installing PCM+, IDM, MM and NIM products.



© 2007 Hewlett-Packard Development Company, LP. The information contained herein is subject to change without notice.

December, 2007

Printed in Singapore

Part Number: 5991-8635

