

Replacing the zl Services Module Flash Card

for the HP ProCurve ONE zl Services Module

Note


Static electricity can severely damage the electronic components on the modules. When handling and installing the modules in your switch, follow these procedures to avoid damage from static electricity:

- Handle the module by its bulkhead or edges and avoid touching the components and the circuitry on the board.
 - When installing the module, equalize any static charge difference between your body and the switch by wearing a grounding wrist strap and attaching it to the module's bulkhead, or by frequently touching the module's bulkhead.
-


The zl Services Module may be removed while the switch is powered.

1. Using either a flat-bladed or Torx T-10 screwdriver loosen the retaining screws securing the module. (You cannot access the Compact Flash when the module is installed.)
2. Using the extractor handles, pull the module out from the slot and turn it over.
3. Slide out the old flash card by applying slight pressure to the top of the flash card and sliding it to the right.
4. Position the new flash card properly and slide in the new flash card being careful not to bend any connector pins.
5. Re-install the module into the switch.
6. Use an equal amount of pressure and push both extractor handles closed to completely seat the module.
7. Tighten the retaining screws.


1.

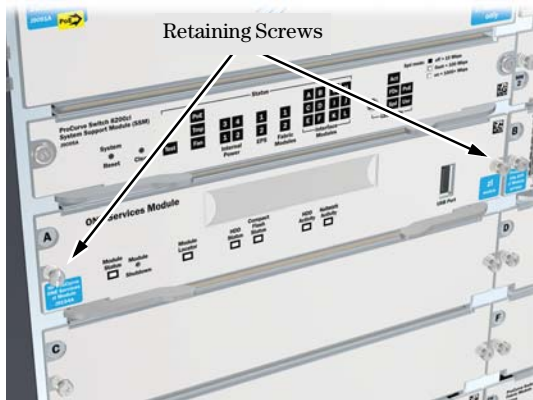


2.

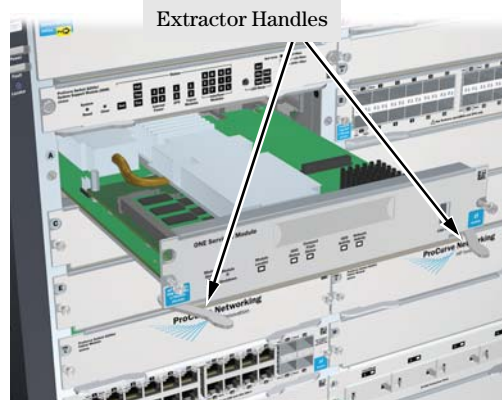

3.

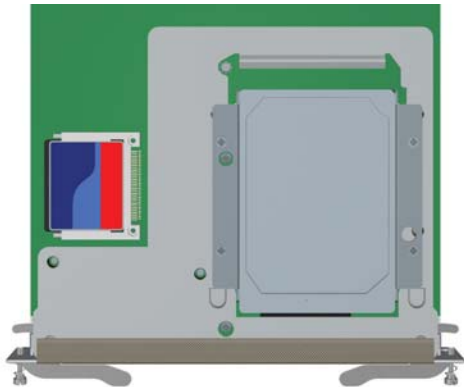

4.

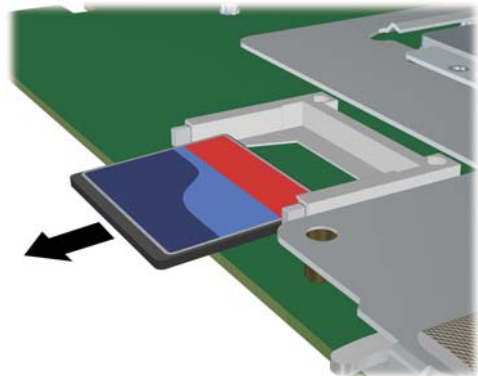

© Copyright 2008 Hewlett-Packard Development Company, LP. All rights reserved. The information contained herein is subject to change without notice.



Part Number: 5992-3073
July 2008

