

Support for the J8177C 1000Base-T Mini-GBIC

Important — Ensure the locking latch is at 90 degrees when removing the J8177C 1000Base-T Mini-GBIC from your switch. Follow this procedure:

1. Remove the attached cable from the mini-GBIC.



Figure 1. Latch in locked position

2. Swivel the latch 90 degrees to the unlocked position.

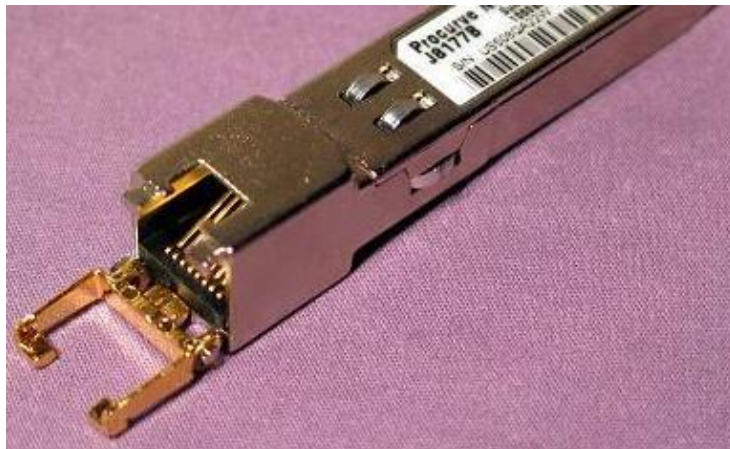


Figure 2. Latch in unlocked position

Caution

DO NOT FORCE THE LATCH.

If latch does not easily swivel 90 degrees:

- a. Move the latch back to the locked position.
 - b. Re-seat the mini-GBIC by pressing it back into the switch.
 - c. Repeat step 2.
-

Product	Minimum Software Required	Support Notes
Switch 1400 Series J9077A J9078A	N/A	Not supported
Switch 1700 Series J9079A J9080A	N/A	Not supported
Switch 1800 Series J9028A/J9028B J9029A	N/A	Not supported
Switch 2510-24 J9019A/J9019B	N/A	Not supported
Switch 2510-48 J9020A	Any software version	Supported
Switch 2510G Series J9279A J9280A	N/A	Not supported
Switch 2600 Series J4899A/B/C J4900A/B/C J8164A J8165A J8762A	N/A	Not supported
Switch 2610 Series J9085A J9086A J9087A J9088A J9089A	Any software version	Supported
Switch 2800 Series J4903A J4904A	N/A	Not supported
Switch 2810 Series J9021A J9022A	N/A	Not supported
Switch 2900 Series J9049A J9050A	N/A	Not supported
Switch 3400cl Series J4905A J4906A	N/A	Not supported
Switch 3500yl Series J8692A J8693A	N/A	Not supported
Switch 4100gl Series J4865A J4887A	G.07.69	For use in the J4893A Switch gl 6-Port Mini-GBIC Module, and the J4908A Switch gl 20-Port 10/100/1000 Module. For the ProCurve Switch gl 10/100/1000 Module (J4908A), the J8177C mini-GBIC can be installed in either the upper or lower mini-GBIC port, but will block access to the other port.

Product	Minimum Software Required	Support Notes
Switch 4200vl Series J8770A J8771A J8772A J8773A	For the J8776A module: L.10.01 For the J9033A module: L.10.23	For use in the J8776A Switch vl 4-Port Mini-GBIC Module and in the J9033A Switch vl 20-Port Gig-T + 4-Port SFP Module.
Switch 5300xl Series J4819A J4850A	E.09.22	Not supported: J4907A (Switch xl 16-Port 10/100/1000 Module). Supported: J4878A/J4878B (Switch xl 4-Port Mini-GBIC Module).
Switch 5400zl Series J8697A J8698A	Any software version	For use in the J8705A Switch zl 20-Port 10/100/1000 + 4-Port Mini-GBIC Module, and in the J8706A Switch zl 24-Port Mini-GBIC Module.
Switch 6108 J4902A	N/A	Not supported
Switch 6200yl-24G-mGBIC J8992A	Any software version	For use in all 24 ports of the J8992A Switch 6200yl-24G-mGBIC.
Switch 8100fl Series J8727A J8728A	CY.01.02.0050	For use in the J8735A Switch fl 10-Port Mini-GBIC Interface Module.
Switch 8212zl J8715A	Any software version	For use in the J8705A Switch zl 20-Port 10/100/1000 + 4-Port Mini-GBIC Module, and in the J8706A Switch zl 24-Port Mini-GBIC Module.
Switch 9300m Series J4138A J4139A J4874A	N/A	J8177C is not supported. 9300m customers can purchase supported J8177B product from the HP Parts Store: www.hp.com/buy/parts Order the J8177-61201, while supplies last.
Switch 9408sl J8680A	N/A	J8177C is not supported. 9408sl customers can purchase supported J8177B product from the HP Parts Store: www.hp.com/buy/parts Order the J8177-61201, while supplies last.

Software Updates Are *Free!*

Hewlett-Packard provides free software updates on the ProCurve Web site for your switch. To access the software updates, go to the ProCurve Web site at www.procurve.com, then click on **Software updates** to go to the “ProCurve Networking software updates” page. Under **Latest software** click on **Switches** to go to the page that has the free download for your switch.

Register for Automatic Notification of Updates. From the “ProCurve Networking software updates” page, you can also register yourself to automatically receive email notice of new updates for your managed ProCurve networking products.

To determine whether you have the latest software, you can compare the software version that is available on the Web site with the version that is currently installed on your switch.

© Copyright 2008 Hewlett-Packard Company, L.P.
The information contained herein is subject to
change without notice.

August 2008

